



## Manual of SD Camera BD-403V




### Quick start

#### A. Micro SD card installation

Open the metal housing of the camera, and insert a micro sd card.  
(Please use 1GB-32GB original type micro sd card)



## B. Wire connection

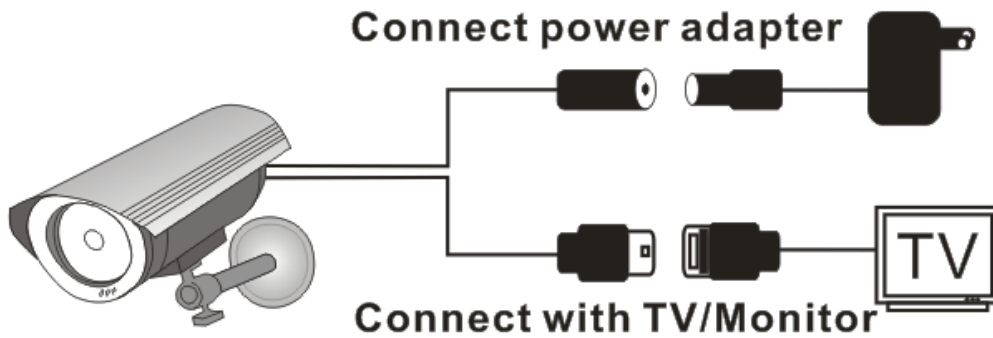


C. Install the camera face to the area need to be monitored. After power connected, camera will start recording automatically.

### Remarks:


1. When there has movements in front of camera, the frame is 12f/s.
2. If there has no movements, the camera recording rate will be 1f/s, it helps save memory
3. Once the power connected, the camera will start recording automatically, and non-stop unless you stop it by remote controller
4. If there have no operations in MENU mode in 5 seconds, it exit to preview mode and then start recording again.

### Details instructions:

1. Symbols on TV

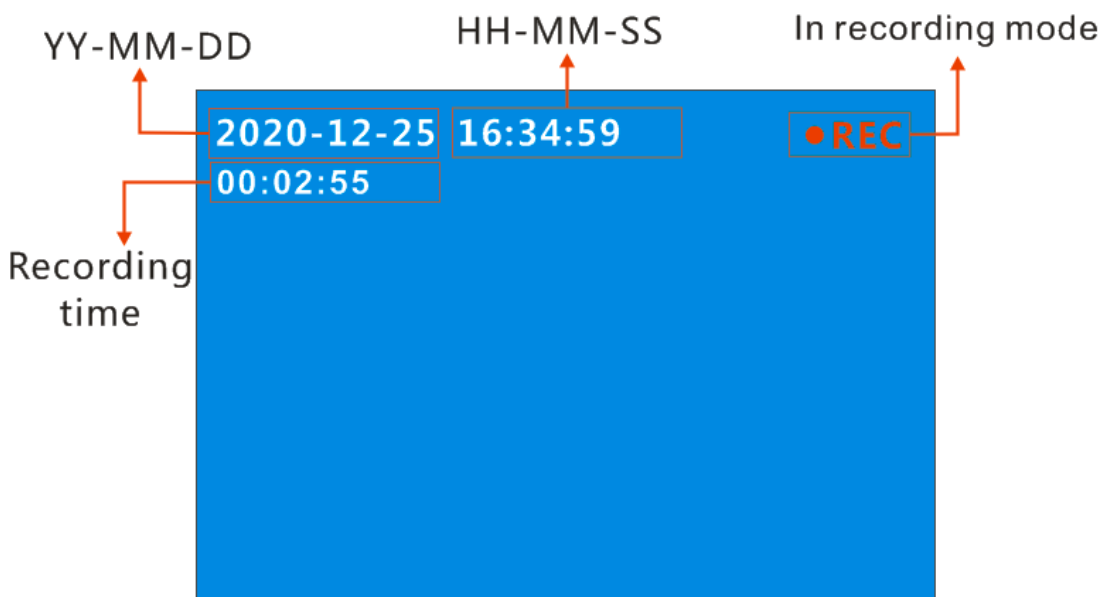

2. Instruction of remote controller

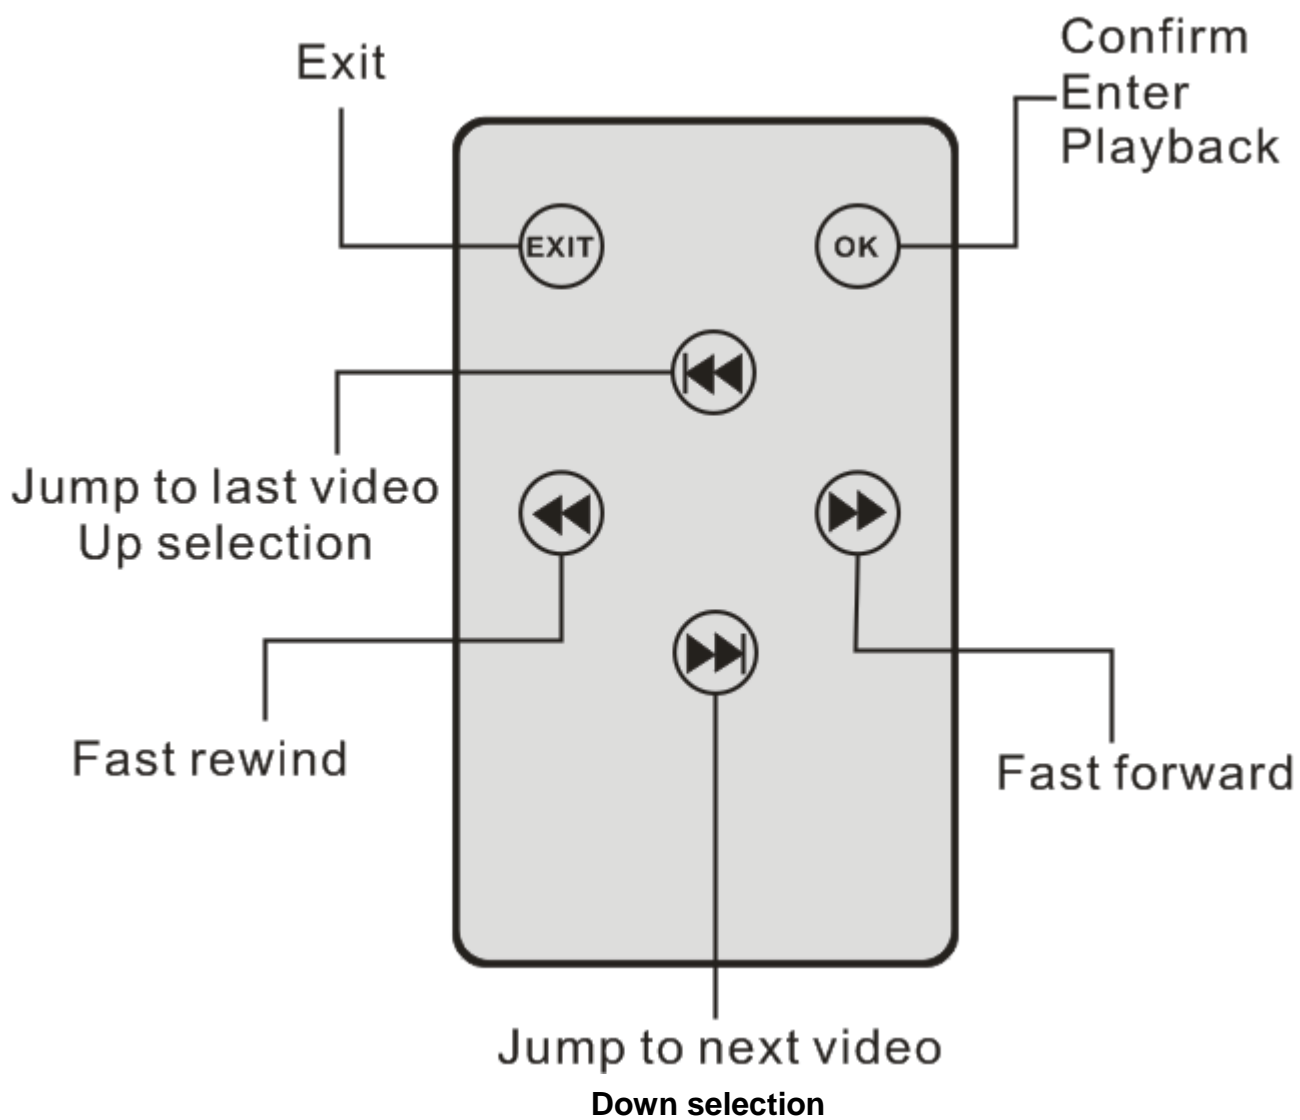

3. Enter into MENU mode

In preview or recording mode, press "OK" to enter into Menu.




\*If there has no operation in 5 seconds, it exit to preview mode automatically and then start recording video.


A. Camera


After set up the camera, select this item to exit Menu mode.


## B. Video Player


Select the video file you want to play back by different date and time, and then press “OK” to play back.

Press  to pause during video playing

Press  key to fast forward, there has 6 class to select, class 6 is highest speed.

Press  key to fast rewind, there has 6 class to select, class 1 is highest speed.

Press  key to jump to next video file

Press  key to jump to last video file

## C. Tool box

Useless in this version

## D. Explorer

Recidx: Useless

System: choose “default” to reset this camera





Video: choose video file to playback by different date and time

## E. System setting

### **Language:**

Support Chinese and English

### **Time and date setting:**

Press “OK” to enter in this mode, press  and  key to select which item you want to change, and then press  and  key to change it.

### **Time format:**

You can set the time format in 12 hour mode or 24 hour mode.

### **Version:**

Press “OK” to check camera software version.

## 4. Playback

A. Playback on TV by camera. Select the video file you want to play back by different date and time in “Video player” menu, and then press “OK” to play back.

B. Take out the micro sd card, and then use the card read to playback it on computer.

**Specifications:**

<b>Item</b>	<b>Data</b>
Micro Processor	ARM9 32-bit microprocessor core
Compression	Mpeg-4
Video format	AVI
Resolution	640x480
Frame rate	1-12 f/s
Image sensor	1/4 CMOS sensor
Lens	6mm
View angle	50°
Night vision	20 meter
S/N ratio	48 db

COUNTRY OF ORIGIN: CHINA

<http://www.global-export-import.eu>