



Metal Air Compressor

Instruction Manual

MODEL NO. JJ-010



To inflate Truck Utility Vehicles Cars Motorcycle Tires:

- 1.To achieve optimal performance when operating your air compressor, Your vehicle's engine should be running.
- 2.Plug the compressor's power cord into the cigarette lighter socket. Screw the air hose's brass valve tip directly onto the tyre's air valve.
- 3.Turn the compressor ON, begin to inflate tire.
- 4.When the pressure gauge reaches the desired pressure switch the unit OFF and remove the air hose from the valve.

Specifications:

Voltage: DC 12V

MAX: 10Amp

Max Watt: 120W

Flow Rate:30L/Min

Max Pressure: 150PSI

30 mm cylinder

2.5M cable

39cm air hose

3 nozzle adaptors for car tires, bikes, balls....

Precautions on use:

- 1.Allow sufficient cooling time before storing.
- 2.All parts are life time lubricated and no oiling is required.
- 3.To avoid exhausting the car battery please have the engine running while using the air compressor.
- 4.Please ensure that the power switch is in the OFF position when not in use.

www.global-export-import.eu