



MINI AIR COMPRESSOR

Operating instructions



LS-4001

1. Do not run the compressor for more than 15 minutes at a time. If you need to use it for longer, turn it off and let it rest for 10 minutes before starting again.
2. This compressor is not designed for inflating high pressure tyres such as trucks, trailers or tractors.
3. When running at more than 75 Psi, do not operate for more than 7 minutes.
4. When using the compressor, never leave it unattended

To Inflate Tires

1. Move vehicle so that the valve is on the bottom closest to the ground. Place the air compressor next to the tire.
2. Plug the power cord into the cigarette lighter receptacle.
3. Place connector on valve stem and push down as far as possible. Close the thumb latch.
4. When the proper pressure is reached, unplug the power cord.
5. Remove adaptor from tire valve. remove the power cord from the cigarette-lighter.
6. Always leave the thumb latch in the open position when storing the compressor.

For Inflatables



SPORTS ADAPTER



ADAPTORS FOR INFLATABLES



LOCK VALVE STEM CONNECTOR

1. Select the suitable adaptor and insert it into the connector. Close the thumb latch.
2. Check your owners manual for exact tire pressures. Others might be
Footballs 13Psi
Two man boat firm

3. Insert adaptor into article to be inflated.
4. Plug power cord into cigarette lighter receptacle.
5. When proper pressure is reached unplug power cord.
6. Remove adaptor from inflated article. Remove adaptor from connector. Remember to leave thumb latch in open position when storing.
7. Always check item being inflated with proper pressure gauge. Avoid excessive pressure in low pressure objects.

WARNING

Avoid over-inflating. Never exceed the recommended pressure. Items over inflated may burst and cause serious injury.

TROUBLE SHOOTING

COMPRESSOR DOES NOT START/BLOWS FUSES

1. Push the power plug firmly into the receptacle and twist it back and forth.
2. Check receptacle and plug terminals for dirt, particularly tobacco. Use a non-conductive probe, not fingers or metal.
3. Check lighter fuse. This should be 15 amps minimum
4. Power cord might be unplugged.

COMPRESSOR RUNS BUT: DOES NOT INFLATE

1. Be sure the connector is on the valve stem as far as possible before closing the thumb latch.
2. Check article for leaks.
3. Check hose for breaks and leaks of fittings.

COMPRESSOR RUNS SLOWLY

1. Overheated from excessive use. Unplug power cord and leave it to cool for 30 minutes.
2. Voltage too low. Check condition of battery.

CAUTION

1. This compressor is capable of inflating to 200 Psi. To avoid over inflation follow operating instructions as required. Do not exceed recommended pressure at any time. Do not leave unit unattended while operating.
2. The compressor should be kept out of reach of small children.
3. Ensure that the connector is screwed into the valve stem until it looks firmly in place.

Country of Origin: China
Importer & distributor: GLOBAL EXPORT-IMPORT LTD.
www.global-exprt-import.eu