

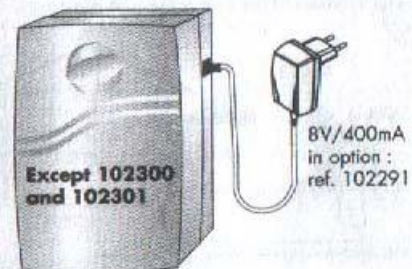


## Wireless door chime - Note of assembly

### 1) Setting up battery (or adapter).

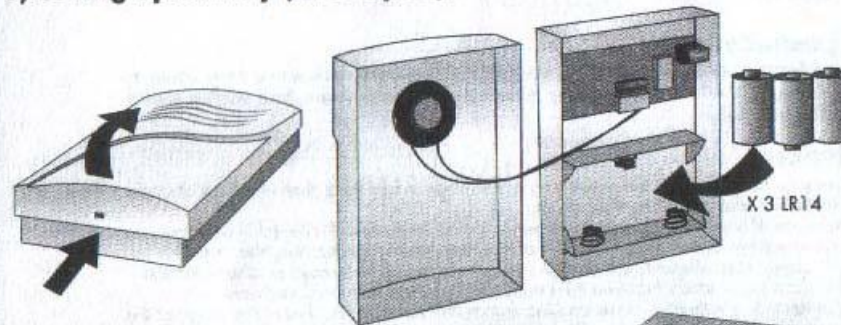


In that case, remove battery.

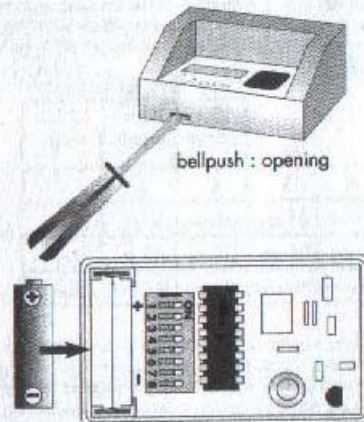


### 2) Coding

To avoid any interference with the neighborhood, code your carillon. Compose a code by means of dip switches. The code must be identical on the door chime and on the bellpush.

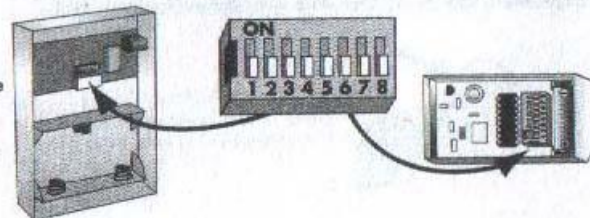

### 3) Choice of GSM bells (except 102300 and 102301)

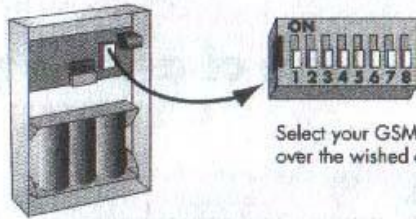

Select your GSM bell 1 or 2 or 3... or 8, by tipping over the wished dip switch on ON.

### 4) Installation


It is advised to make attempts of investment to find the ideal place where the bellpush and the door chime will work in harmony, without the slightest problem. Both must be placed as high as possible.

#### REMINDER :


The range mentioned on the packaging is the range in free field, that is without obstacle between the button and the door chime.

The range of a wireless doorchime depends on the environment in which it is placed. Any electromagnetic disturbance (nearness of high line or average tension, nearness of a meter EDF) or any solid element such as metal infrastructure, the reinforced or other concrete which can put obstacle between the broadcasting button and the doorchime carry automatically a reduction of the transmission of the waves radio, thus of the range of the door chime. Here are examples which will give you an indication onto the range following the met obstacles (thickness of the pillar of the wicket, and thickness of the wall of the house).

		50 m range	80 m range	120 m range
A	B	C	C	C
10 cm	25 cm	35 m	50 m	70 m
20 cm	25 cm	30 m	40 m	60 m
30 cm	30 cm	20 m	30 m	50 m


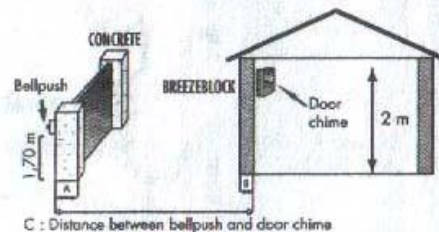


Indicative data: variations can be connected to the composition of materials and to the configuration of the site. Avidsen company doesn't accept responsibility concerning these data. In certain cases, we can improve the door chime's range by placing the bellpush following the drawing: In every case, before any definitive installation, it is advised to make attempts to find the ideal place where the bellpush and the door chime will work in harmony without any problem. Council: never place the bellpush on a metal surface (mailbox, etc.)

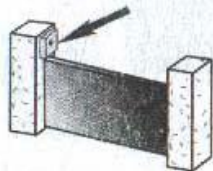


### 5) Once the definite place:

Fix the door chime to the wall (screws supplied) or put it on a support or on a piece of furniture.

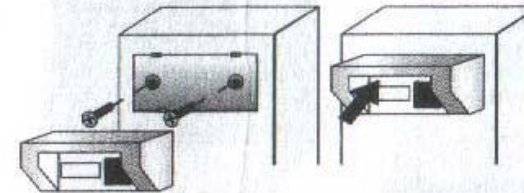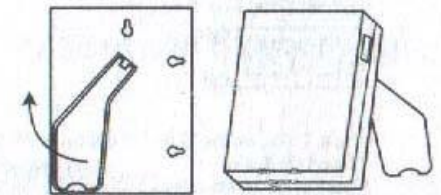

Fix the bell to the pillar or to the outside wall.

Remove the transparent plastic protection by means of a fine tool. Put your name and replace the transparent part.

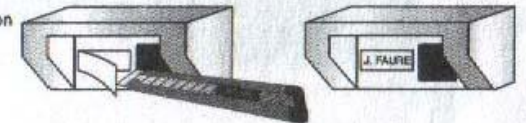

### 6) Remove battery


note: once worn, battery mustn't be thrown to the garbage but to a service of recovery of battery.

- According to the law, consumers must recycle all used batteries. It is forbidden to throw the used batteries in a standard garbage !
- Batteries containing noxious matters are signalled by symbols that remind it is forbidden to throw the batteries in a standard garbage. The symbols are the following : Cd : cadmium cell, Hg : mercury, Pb : lead. You can give back your used batteries to your waste reception centre which is under an obligation to take them back.


Keep out of reach of children ! The batteries could be swallow by children or by pets. Danger of Death ! If the batteries are swallowed, please consult a doctor immediately. The batteries must not be short-circuited, they must not be thrown in the fire and they must not be recharged ! There is a risk of explosion !

### 7) Door chime with digital clock (ref.102303)

- Remove the strip making inactive battery of the watch.
- 12:00 displays in the screen.

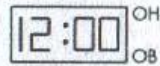

- Press 1 time on the button of the height H: 2 points between 12 and 00 flash.
- Press twice on the button of bottom B: 12 appears.
- adjust the month by pressing on H.
- Press 1 time on B; adjust the date with H.
- press 1 time on B; adjust the hour with H.
- press 1 time on B; adjust the minutes with H.
- press 1 time on B; the complete hour appears.
- press 1 time on H: the date and the month appear.
- press twice on H: the seconds appear.
- press on H: the hour reappears.

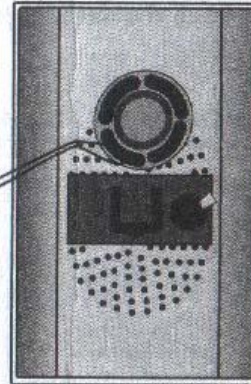


Battery to be used: AG-12 1,5V button battery (supplied).



### 8) Door chime with carry-photo (ref. 102305)

To change the photo, remove the part containing the loudspeaker.

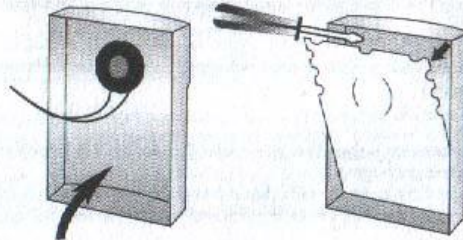

CE 0536



Numero soporte / phone  
00 34 93 865 58 75  
CIF: A-8148842  
soporte@avidan.es  
Italia 02 94 94 36 91

BENELUX  
+32 034 264 86 48



ESPAÑA / PORTUGAL

93 865 58 75

soporte@avidan.es

