



# PIR KEYPAD ALARM

MODEL: YL-107



PIR RANGE : 5M

POSITION: CHIME; INSTANT; DELAY

BATTERY: 3 AA SIZE (4.5V) NOT INCLUDED.

## INSTRUCTION (YL-107)

### △ WHAT'S THE FUNCTION

The PIR sensor can detect the human movement and give out a signal to the main unit. Then the main unit gives out chime or alarm sound.

### HOW TO TURN ON OR OFF

Input the secret number followed “#”, the LED will be lighted for 10 seconds that indicate the detecting will be available.

Then if we input again, the LED will flash that indicate the detecting is canceled.

### HOW TO SELECT THE SOUNDS:

- CHIME-----It gives out “ding dong” sound
- INSTANT-----It give out high decimal alarm sound immediately and last 1 minute.
- DELAY-----It gives out soft “DI-DI-”sound for 20 seconds then alarm. In this period you can stop the alarm by input the secret number followed by “#”.

### △ HOW TO CHANGE THE SECRET NUMBER

When you put the battery in the main unit, the initial secret number is “0000”.

Then you input the old number “0000 \* ”,you will hear a long beep and it tells you that you enter a correct old number. Now you can input a 1-12 digit number followed by “ \* ”,then you’ll hear a long beep sound again that indicating you have entered a new number.

### △ HOW TO MAKE THE ALARM SOUND AT ONCE

When in emergency, we can push the red button “ PANIC”, it will alarm at once for 1 minute.

We can input secret number followed “#” to stop alarm sound.

<http://www.global-export-import.eu>