


TO USER

Parking sensor

Installation & User's Manual

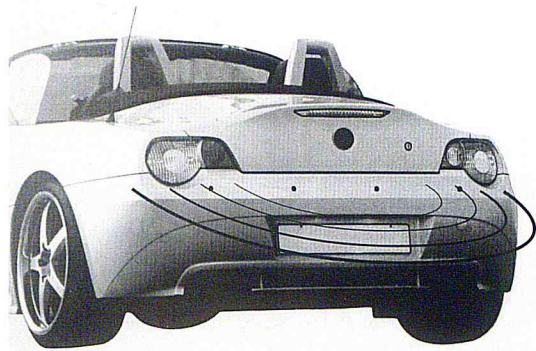

Dear User ,Thank you for choosing and using our Parking sensor .We are going to provide the best products and the best services to you .

To insure the best performance and avoid any false alarm or function failure, please kindly read this manual carefully and install it accordingly.

We reserve all rights for our parking sensor ,including the designs and the software.Any unauthorized copy or translation is prohibited.And the products 'specification and information related in the Manual provide the references only, and the content of the Manual will be renewed according to the progress of the products without advance information, and the final explanation rights of the Manual is reserved by us .

Please note that this system is designed to be a driver's aid and should not replace the need to drive carefully, we accept no liability for damage or loss resulting from improper installation or use of this product, infringement of the vehicle manufacturer's warranty or injury or loss resulting from any accidents however caused. If in doubt please consult a qualified auto electrician.

PARTS

1. Display
2. Control unit
3. Sensors
4. Power Cable
5. Drill bit
6. Manual

Specifications

Rated voltage:DC12V
 Operating range:DC9V-18V
 Rated current:20mA-200mA
 Display distance:0.3-1.8m
 Ultrasonic frequency:40KHZ
 Working temperature:-30°C to +80°C

Alarm MODE



Model	Awareness	Distance	Sound	Digital display	LED indicator
LED Items	Safe mode	130-180cm	Bi...Bi...	1.3-1.8	Green
	Alarm mode	60-130cm	Bi.Bi.	0.6-1.2	Yellow
	Danger mode	0-60cm	BiBiBi	0.0,0.3-0.5	Red
LCD buzzer alarm Items	Safe mode	130-180cm	Bi ...Bi...	1.3-1.8	---
	Safe mode	90-130cm	Bi..Bi..	90-95,1.0-1.3	---
	Alarm mode	60-90cm	Bi.Bi.	60-90	---
	Alarm mode	40-60cm	BiBi	40-60	---
LCD human Voice alarm Items	Danger mode	0-40cm	BiBiBi	P	---
	Safe mode	150-180cm	Bi..Bi..	1.5-1.8	---
	Alarm mode	40-150cm	Voice reminder	40-95,1.0-1.5	---
Danger mode	0-40cm	stop	P	---	

Installation Instruction:




Note: Before installing system let the components of the exhaust system cool down. This will make the installation safer and preclude heat damage to the backup sensor wiring or components.

The following illustration shows the general location of the components of the backup system.

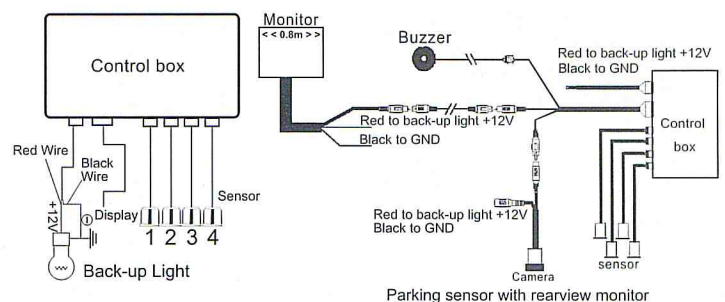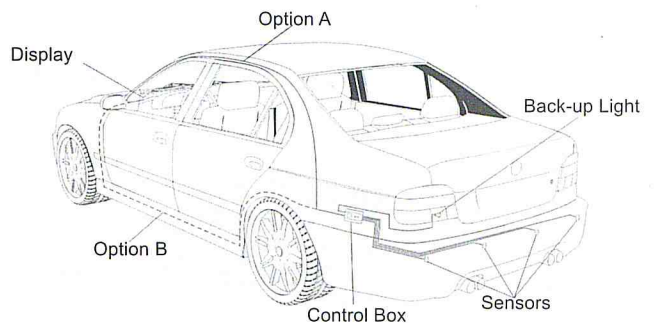


TOOLS

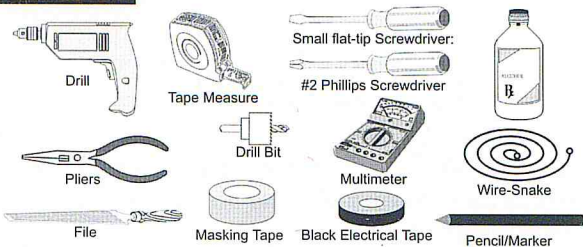

Sensor Installation




First locate where you are going to install the sensors and place a piece of masking tape. Measure and mark the positions of the holes.

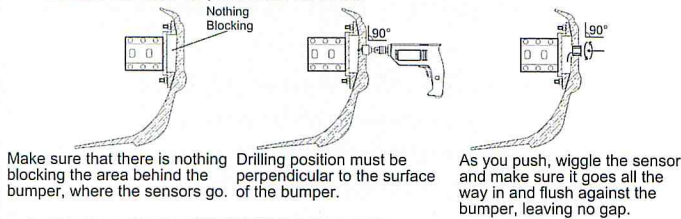

Make sure that there is nothing blocking the area behind the bumper, where the sensors go. Drilling position must be perpendicular to the surface of the bumper.

As you push, wiggle the sensor and make sure it goes all the way in and flush against the bumper, leaving no gap.



Install the sensors vertically; the "UP" sign must be on upside.

4

Limitations


The sensors may not work if an object does not reflect the ultrasonic waves or it has an unusual shape, pole cardboard carton, fire of bicycle, small or slender tree, rectangular lumber or curbs tone. The sensor may not detect another vehicle bumper if it is too high.

Also note: This system has different detection distance to the different object. To the wall, the max detection distance is 1.8m; to the human body, the max detection distance is 1.0m; to the column is 40cm, the max detection distance is 1.2m.


In some special cases, the display may not be the same as the real condition due to the sensor position, obstacle shape, reflection condition and so on. Some examples are given below




If the vehicle is equipped with high-power radio antenna.

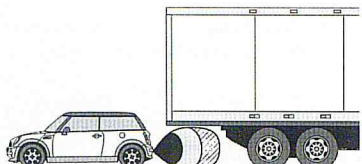


If another vehicle bumper is too high

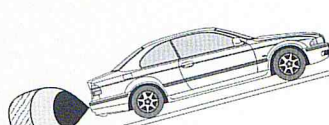

When backing up downhill

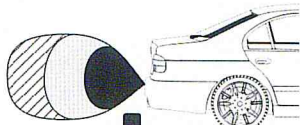


If there is a very small object.

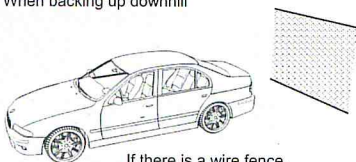


If there is a wire fence.




Backing up in heavy rain or snow.



If is smooth slope




If is smooth round object



Objects absorbing wave, e.g. Cotton


6

Display Installation

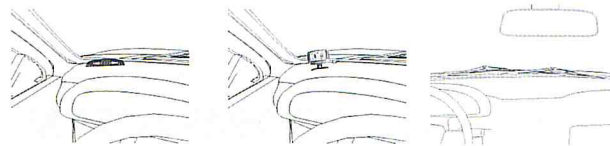

Select an area to mount display firmly and easy for the driver to see. Clean surface with alcohol and use the double sided tape to mount.

Control Box Installation

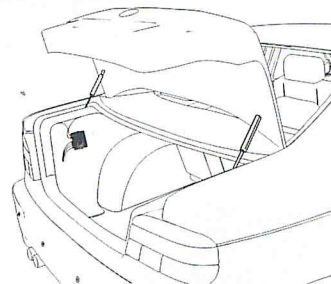

Remove the necessary back panels to mount the control box in a safe place, away from rain, heat or humidity.

After installation Test

Use the following to test and verify the operation of the backup system:

Warning: Do not stand behind a moving vehicle death or injury could occur. Prior to testing, set the parking brake On, ignition key On (do not start), step foot on brake and shift the vehicle into reverse. Ensure that the engine is not running while proceeding with the following tests.

Test the system operation with a piece of wood (60*30*1cm) or other object (not too small) after the installation. Start with the wood more than 1m away from the vehicle. Then move the wood closer the vehicle and ensure that the buzzer, LED, and distance indicators display correctly.

5

Trouble shooting

No buzzer or display at power up?

1. Is power wire connected to control unit correctly?
2. Verify (+)12V at control unit when vehicle is in reverse.
3. Verify the ground connection.
4. Have you connected to the correct reversing indicator wire?
5. Do you have a minimum of (+)12V and ground at the display?

False warning tone or false LED flashing

1. Is the sensor mounted too low or pointing to the ground?

Sensors do not detect any objects?

1. Is the vehicles exhaust smoking? Correct or allow it to clear before proceeding with testing.
2. Are sensors properly plugged into the correct sockets?

GUARANTEE FORM

Model Number		Stamp/signature of dealer:
Date of purchase		
Customer's name		
Telephone		
Car registration Number		

Note

1. Guarantee time: 12 months.
2. The guarantee will be effective with the stamp/signature of the dealer.
3. please keep the guarantee form well to ensure 12 months guarantee.

7